

Installation

PROCEDURES

PAGE 1/1

SUBJECT

Revised wiring instructions


APPLICATION

2001 GMC Duramax Diesel with automatic or manual transmission and optional trailer towing package.

Field reports indicate that some vehicles are using an optional trailer towing package. The power supply for this option uses the same pin at the Mid-Bec as the red wire of the Pacbrake harness. A fuse harness is supplied in this kit to provide 12V power directly from the battery. Please follow the procedure below for correct installation.

Installation Procedure:

1. Feed the red wire in this kit from the engine compartment into the cab through the same location as the yellow wire.
2. Using the heat shrinkable connector supplied, connect the red fuse wire of this kit to the red wire which was to be installed in the Mid-Bec. Crimp the connector to the wires and heat to provide a sealed connection.
3. Route the fused end of the red wire to the positive battery terminal and connect.
4. Using the loom and tie-straps provided protect and secure the new power supply.

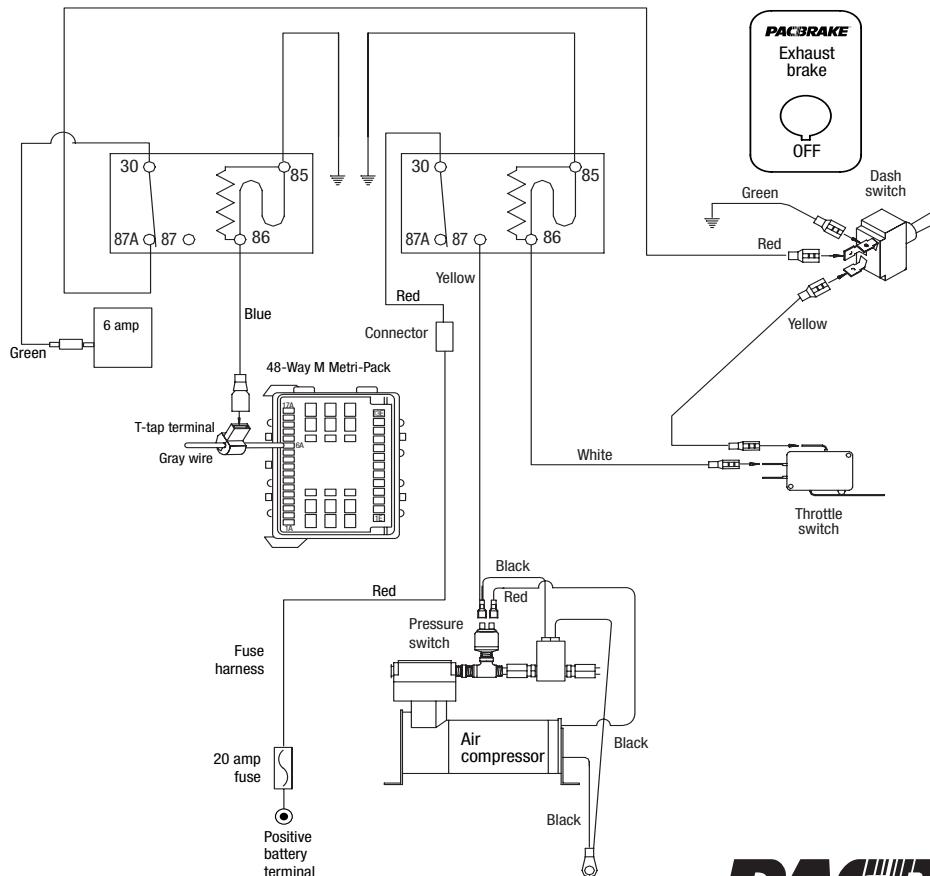

PACBRAKE®
ENGINE & EXHAUST BRAKES